


Log In

Please go to locate.brickhousesecurity.com and log in using the username and password provided in the email we sent you. Please note that the username and password are case-sensitive.

If you have forgotten your password, resetting it can be done through the [Forgot your password link](#).

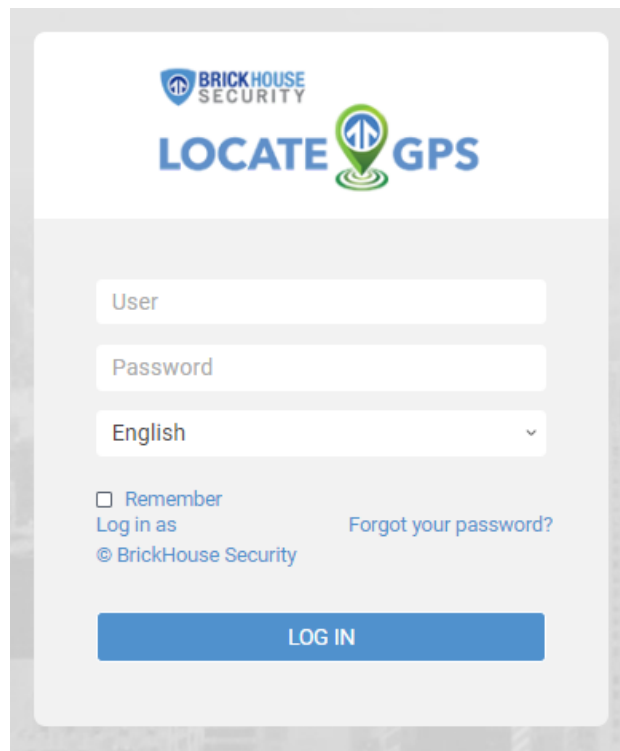

The image shows a login form for BrickHouse Security's Locate GPS service. At the top, there is a logo for BrickHouse Security and the text "LOCATE GPS" with a green location pin icon. Below the logo are three input fields: "User", "Password", and a dropdown menu currently set to "English". Under the input fields, there is a checkbox labeled "Remember" and the text "Log in as". To the right of this is a link that says "Forgot your password?". At the bottom left, there is a copyright notice "© BrickHouse Security". A blue button labeled "LOG IN" is positioned at the bottom center of the form.

Eco Driving Tab

Once logged in, go to the Unit Properties by clicking on the wrench icon next to the unit you want to edit then click on the Eco Driving Tab. On this tab, you can select the vehicle type being tracked, Automobile, Truck, or Bus, in the Preset dropdown. The default values will appear when you click the “Add” button. This is the only field we recommend updating in the Eco driving tab.

Unit properties – Ford

General Access Icon Advanced Sensors Custom fields Unit groups Commands **Eco driving**

Profile Trip detector Service intervals

Preset: Automobile **Add** Calculate acceleration by: GPS and eco driving parameters

New Search

Name	Criterion	Min. value	Max. value	Penalty	Advanced
Acceleration: extreme	Acceleration	0.4 g		2000	Averaging: By mil...
Acceleration: medium	Acceleration	0.31 g	0.4 g	1000	Averaging: By mil...
Brake: extreme	Braking	0.35 g		2000	Averaging: By mil...
Brake: medium	Braking	0.31 g	0.35 g	1000	Averaging: By mil...
Speeding: extreme	Speeding	41 km/h		5000	Averaging: By mil...
Speeding: medium	Speeding	21 km/h	41 km/h	2000	Averaging: By mil...
Turn: extreme	Turn	0.4 g		1000	Averaging: By mil...
Turn: medium	Turn	0.31 g	0.4 g	500	Averaging: By mil...

Restore properties Export to file Cancel **OK**


After adding the criteria and specifying all the required parameters, you can view a report with detailed information about all the violations on the Eco Driving app.

Calculating Acceleration

Acceleration is the difference in the unit speed divided by the difference in time. The movement direction of the unit allows for determining the acceleration type: speeding, turn, reckless driving, etc.

When calculating acceleration, the following data is used: unit location, initial and final speed values, travel time between two points, unit movement direction, and values of special parameters sent by the device.

By default, acceleration is calculated using the **GPS and eco-driving parameters** method. **We strongly recommend that you do not change this.**

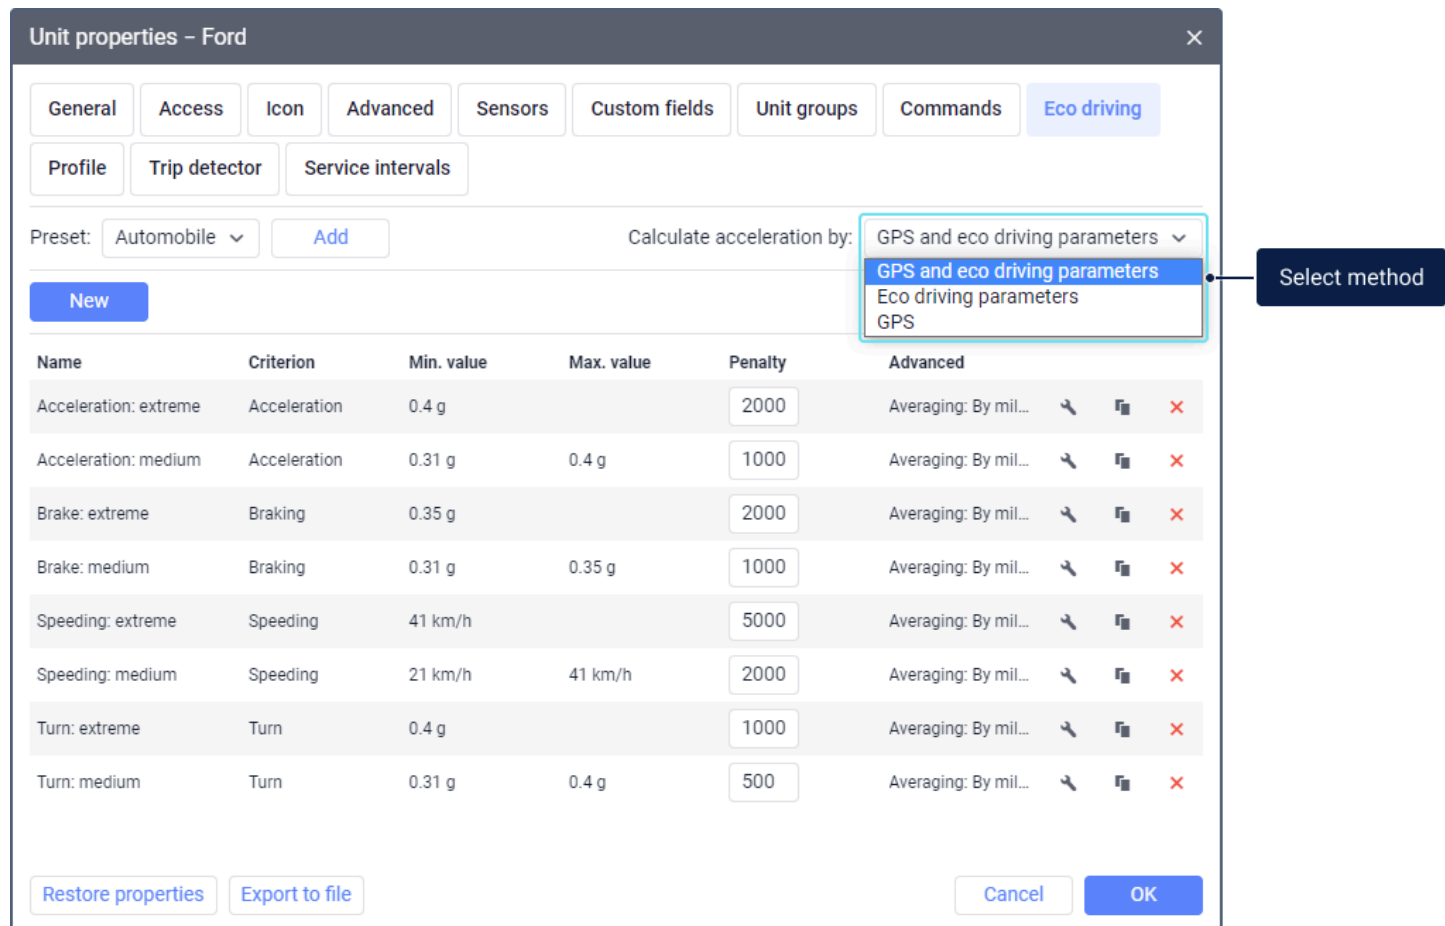

Unit properties - Ford

General Access Icon Advanced Sensors Custom fields Unit groups Commands **Eco driving**

Profile Trip detector Service intervals

Preset: Automobile ▾ Add Calculate acceleration by: GPS and eco driving parameters ▾

New

Name	Criterion	Min. value	Max. value	Penalty	Advanced
Acceleration: extreme	Acceleration	0.4 g		2000	Averaging: By mil... 🗑️ 📄 ✖
Acceleration: medium	Acceleration	0.31 g	0.4 g	1000	Averaging: By mil... 🗑️ 📄 ✖
Brake: extreme	Braking	0.35 g		2000	Averaging: By mil... 🗑️ 📄 ✖
Brake: medium	Braking	0.31 g	0.35 g	1000	Averaging: By mil... 🗑️ 📄 ✖
Speeding: extreme	Speeding	41 km/h		5000	Averaging: By mil... 🗑️ 📄 ✖
Speeding: medium	Speeding	21 km/h	41 km/h	2000	Averaging: By mil... 🗑️ 📄 ✖
Turn: extreme	Turn	0.4 g		1000	Averaging: By mil... 🗑️ 📄 ✖
Turn: medium	Turn	0.31 g	0.4 g	500	Averaging: By mil... 🗑️ 📄 ✖

Restore properties Export to file Cancel OK

Select method

Adding criteria

You can add eco driving criteria by applying a preset or creating them manually.

Adding criteria using a preset

Depending on the vehicle type, you can add a list of criteria with the already configured parameters. To do this, select the required preset from the three available options (Automobile, Truck, Bus) and click Add.

The screenshot shows the 'Unit properties - Ford' dialog box with the 'Eco driving' tab selected. The 'Preset' dropdown menu is open, showing 'Automobile', 'Truck', and 'Bus' options. A red 'Add' button is highlighted. The table below lists the criteria that will be added:

Name	Criterion	Min. value	Max. value	Penalty	Advanced
Acceleration: extreme	Acceleration	0.4 g		2000	Averaging: By mil...
Acceleration: medium	Acceleration	0.31 g	0.4 g	1000	Averaging: By mil...
Brake: extreme	Braking	0.35 g		2000	Averaging: By mil...
Brake: medium	Braking	0.31 g	0.35 g	1000	Averaging: By mil...
Speeding: extreme	Speeding	41 km/h		5000	Averaging: By mil...
Speeding: medium	Speeding	21 km/h	41 km/h	2000	Averaging: By mil...
Turn: extreme	Turn	0.4 g		1000	Averaging: By mil...
Turn: medium	Turn	0.31 g	0.4 g	500	Averaging: By mil...

Driving Quality Assessment Parameters

To penalize driving quality violations, you need to enter the number of penalty points for each parameter that is evaluated. This is done by specifying the penalty points in the Penalty field. Once you have set the penalty points for each violation based on the selected criterion, click OK to save them.













 
 













Unit properties – TrackPort Pro 581357

General Access Icon Advanced Sensors Custom fields Unit groups Commands Eco driving

Profile Trip detector Service intervals

Preset: Automobile Add Calculate acceleration by: GPS and eco driving parameters

New Search

Name	Criterion	Min. value	Max. value	Penalty	Advanced
Acceleration: extreme	Acceleration	0.4 g		2000	Averaging: By mil...   
Acceleration: medium	Acceleration	0.31 g	0.4 g	1000	Averaging: By mil...   
Brake: extreme	Braking	0.35 g		2000	Averaging: By mil...   
Brake: medium	Braking	0.31 g	0.35 g	1000	Averaging: By mil...   
Harsh driving	Reckless driving	0.3 g		300	Averaging: By mil...   
Speeding: extreme	Speeding	25.5 mph		5000	Averaging: By mil...   
Speeding: medium	Speeding	13 mph	25.5 mph	2000	Averaging: By mil...   
Speeding: mild	Speeding	6.2 mph	13 mph	100	Averaging: By mil...   
Turn: extreme	Turn	0.4 g		1000	Averaging: By mil...   


Restore properties Export to file Cancel OK

The penalty points are then converted into the 10-point assessment system using the following algorithm:

Penalty	Rank
0	10.0
0-17	9.0-10.0
17-38	8.0-9.0
38-67	7.0-8.0
67-107	6.0-7.0
107-167	5.0-6.0
167-267	4.0-5.0
267-467	3.0-4.0
467-1067	2.0-3.0
More than 1067	1.0-2.0

Eco Driving App

 To access the Eco Driving App, click the Apps icon in the upper right corner of the screen and select Eco Driving.

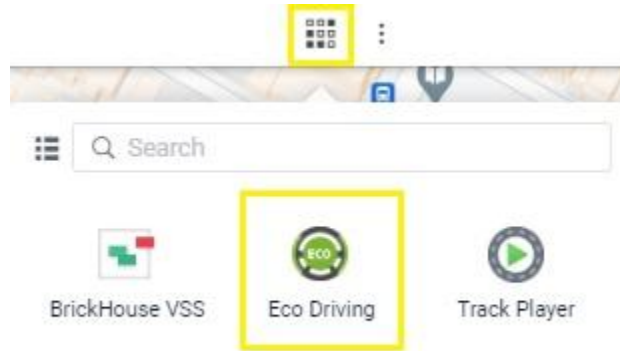

Interface





There are several elements in the application interface:

- tabs (in the top bar)
- time period (in the top bar)
- statistics table (in the central bar)
- work list (to the left of the statistics table)

A screenshot of the Eco Driving application interface. The top bar shows "Eco Driving" with a green circular icon. Below the top bar, there are tabs for "Units: 4" and "Dan's TP" with a date of "2024-03-11". Below the tabs, there are buttons for "Units", "Drivers", "Yesterday", "Today", "Week", "Month", and "Custom", along with a date selector "2024-03-11". The main content area is divided into two sections. On the left is a work list with a search bar and a list of units: "Dan's TP", "Dan's Nano", "Dan's Mom TP", and "862094064963242". On the right is a statistics table with columns: Unit, Rank, Penalty, Violations, Duration, Mileage, mi, Trips, and a red 'X' icon. The table contains data for "Dan's TP" and "862094064963242".

Unit	Rank	Penalty	Violations	Duration	Mileage, mi	Trips	X
Dan's TP	2.0	1068	9	01:42:57	32.0	4	X
862094064963242	-	-	-	-	-	-	X
Dan's Mom TP	-	-	-	-	-	-	X
Dan's Nano	-	-	-	-	-	-	X

Moving Devices from the Work List

The work list is displayed on the left as either units or unit groups. To switch between the modes, use the  /  buttons. Units in the work list are sorted alphabetically by default, which can be reversed with the  /  buttons. Use the Search bar above the list to find a unit or unit group quickly.

All the devices on your account will be displayed in the Work List. Devices that can provide safety data will appear dark and those that cannot will be grayed out. Devices unable to run a report may simply not have any tracking data available or might not be compatible with the application.

To move a device to the Statistics Table, hover your mouse over the device and left-click on the arrow icon that appears or double-click on the device's name. It will then appear in the Statistics Table with information for the selected period. Devices added to the table will have a checkmark next to them in the Work List.

Creating a Report

In the top bar, choose an interval for which you want to receive a driving quality assessment. You can run your report for **Yesterday**, **Today**, the current **Week**, or the current **Month**, or define your **Custom** time period. Using the **Previous/Next** arrows you can change the current report by a day, week, or month, based on your current selection.

The resulting Statistics table includes the following data:

- the total number of penalty points assigned during the currently selected period
- the number of violations during the currently selected period
- the total duration of time driven during the currently selected period
- distance traveled during the currently selected period
- the number of trips logged during the currently selected period

You can filter the resulting table by any of the indicated criteria by clicking on its heading. You can delete a unit from the table by clicking on the red **X** in the last column of the table. Clear the entire table by selecting the red **X** in the table heading.

Analyzing Trips

To view details of individual trips, left-click on the unit name you want to see. The detailed report for the selected period will open in a new tab. Individual trips are displayed in the bar graph across the top, the map is displayed below to the right, and violations are displayed to the left of the map.

Eco Driving

Units: 4
2024-03-11

Dan's TP
2024-03-11

Dan's TP
2024-03-04 – 2024-03-10

Yesterday Today **Week** Month Custom

2024-03-04 – 2024-03-10

Dan's TP ★ 3.4 🚗 361

Violations of the trip 07.03.2024 15:58:44 – 16:41:19

- 07.03.2024 16:08:00 100 Speeding: mild (6 mph)
- 07.03.2024 16:29:04 20000 Speeding: extreme (36 mph)

09.03.2024 10:17:35 – 10:44:32


★ 3.1 🚗 438

1 Turn
1 Speeding
Trip length 5.7 mi, 00:26:57

Leaflet | Gurtam Maps

Each trip is displayed as a bar on the graph. The wider the bar, the longer the trip it represents. The height of the bar represents the number of penalty points accrued on that trip. The minimum and maximum penalty values on the indicated interval are displayed on the left. When you point to the trip bar, a tooltip with the following information appears:

 - date of the trip
- start and stop time
- mileage
- duration
- number of penalty points
- rank
- number of violations on the trip
- types of violations in the trip

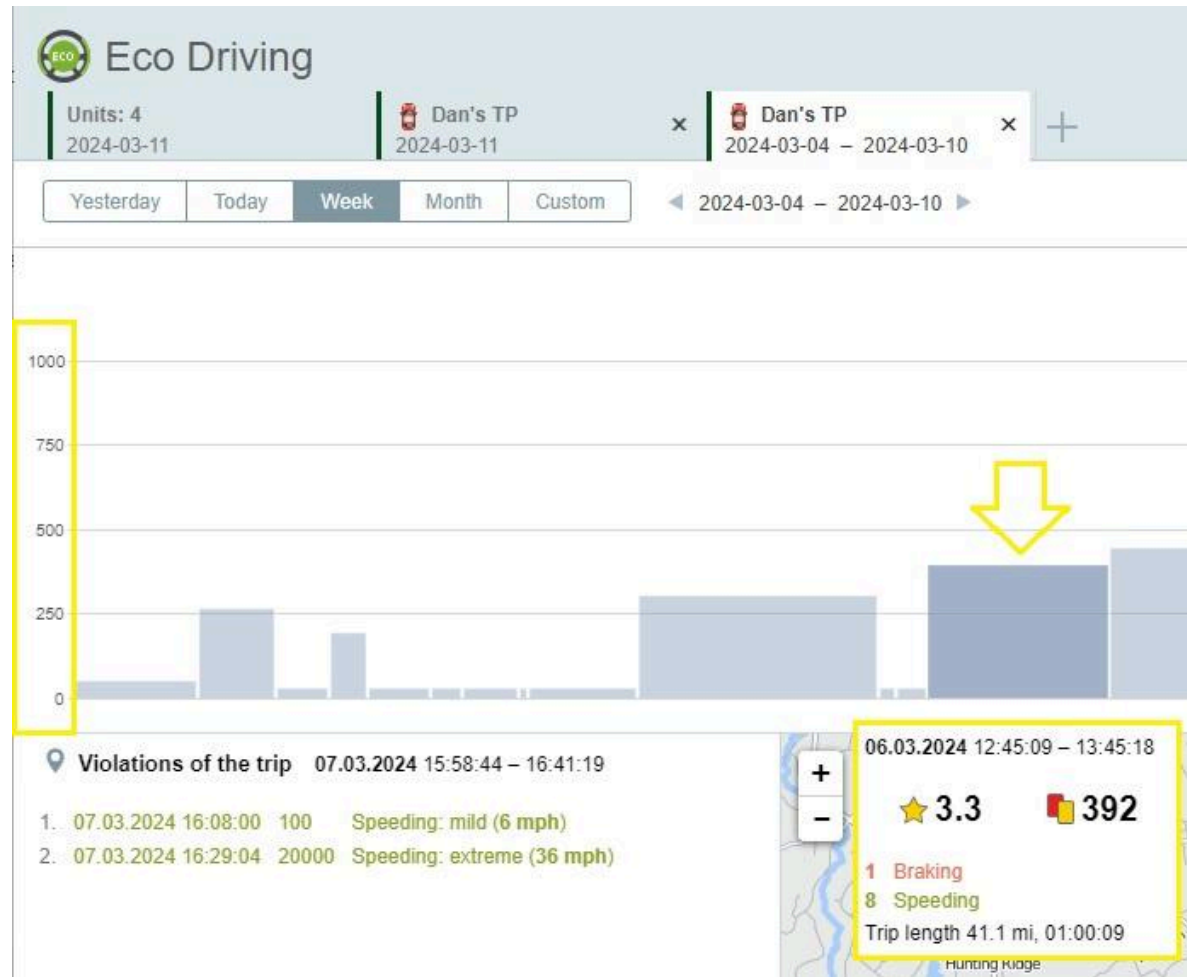


Clicking a bar will center the map on the locations of any violations during that trip and list individual violations on the left side. Details provided will include:

- trip date and duration
- type of violation
- value of penalty points
- value of violation

Violations of the trip 07.03.2024 15:58:44 – 16:41:19

1.	07.03.2024 16:08:00	100	Speeding: mild (6 mph)
2.	07.03.2024 16:29:04	20000	Speeding: extreme (36 mph)

 If you click on the marker of the violation on the map, the line with that violation is highlighted on the list. Trip tracks are colored depending on the unit speed. A scale that explains how color corresponds to speed is in the lower-left corner of the map. Violations on the track are highlighted with numbered markers. You can scale the map using the +/- buttons in the upper-left corner or using your mouse's scroll wheel.

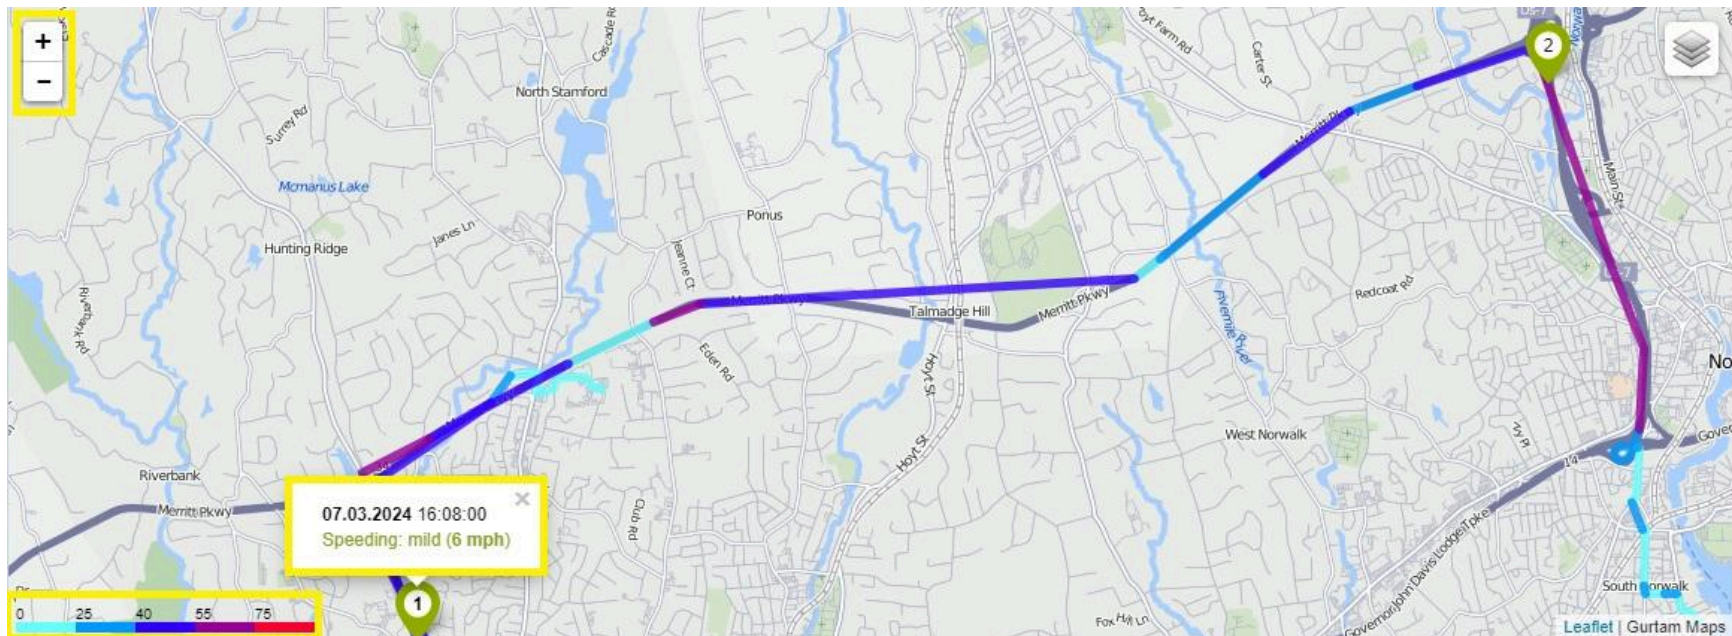

Exporting Data

This option allows you to export unit or unit group data to a file. There are two supported formats: XLS and PDF. To export unit group data in XLS or PDF format, click on the  or  icon, respectively, in the header of the table.

To get a file with data from one unit, point to the desired unit and click on the button that appears at the end of the line. You can also export data from the tab with detailed information about the unit. To do this, click on the export button in the upper-right corner of the workspace.